

# Handleiding Pal Gate 4G-GB

## Pal Gate 4G-GB

Is a 4G network system that opens automatic gates, garage doors, electric locks and roadblocks via an application and an Internet interface \*. It enables complete and secure control of the unit such as:


- Administrators set up.
- Add and remove users (unlimited\*\*).
- Set up relay time.
- **Real time log reading on system usage.**

### System features and benefits :

- Internet interface management ability .\*
- Very small physical size 70X50 mm.
- 4 indicator LED lights (active SIM + 3 reception indicator)
- Multiple administrators and authorized users can be configured for optimal control.
- There is no limit to the number of managed systems.
- Operating temperature range: -30 ~ +85°C Ambient  
- \* by Payment

### LEDs key

| LEDs                           | Meaning                                  |
|--------------------------------|--|
| Fast flashing of the SIM light | System is booting                        |
| Slow flashing of the SIM light | Module is looking for a cellular network |
| 2 blinks and break             | connecting to the Internet process       |
| Four short flashing of the Sim | Connecting to the PAL interface          |
| Sim is stable                  | System ready                             |
| Signal light No. 1 is on       | Low signal                               |
| Signal light No. 2 is on       | Good signal                              |
| Signal light No. 3 is on       | Very good signal                         |

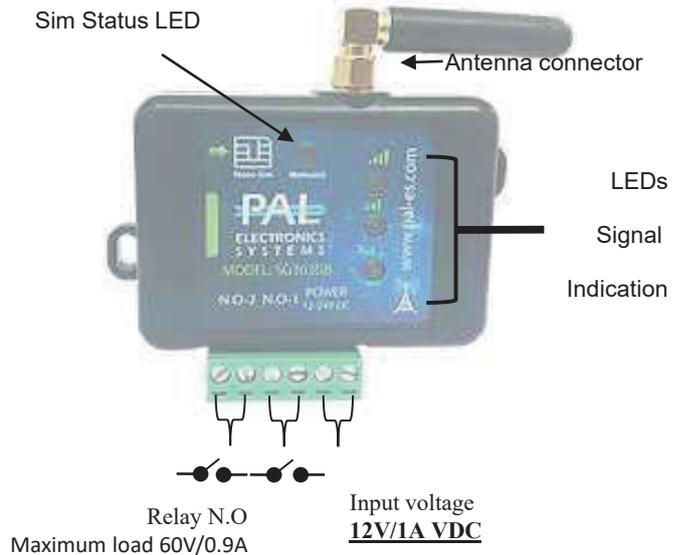

### System settings by the app :

Primary Login:


This application must be first installed from the App Store / Google play by searching for the name PalGate or scan this QR Code for direct link.



# Handleiding Pal Gate 4G-GI

Run the application and to act according to the instructions :

## installation:

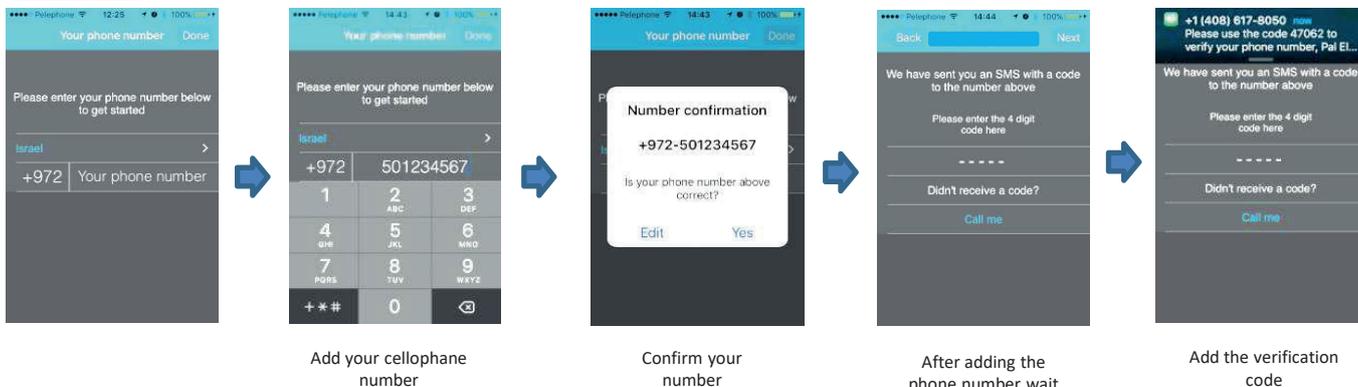

Add your cellophone number

Confirm your number

After adding the phone number wait for verification code

Add the verification code

## Gate setting:



Click the + button to add Gate

Scan barcode or add manually

Device details -Serial number and code are printed on the device and should be added accordingly

After adding the details (relay 1 and 2) click next

The gate (relay 1 and 2) will appear on my gates screen

## Add User/s:



Click on the Gate Settings button

Click on manager options

Click on users

Click Add (+)

Add name and photo or select from the contact list and save

The user will receive a message that he is being added and will appear in the list

## Important Information:

- **Installation at the gate (inside each metal cabinet) must be installed when connected to an external antenna (an antenna outside the cabinet).**
- Requires stable power supply source preferably DC transformers.
- Avoid installation in metal boxes.
- Protect the unit from humidity and insect infiltration.
- The system works via a cellular network using 4G technology. In addition, the system's performance is dependent on the existence of coverage for a 4G service. Pal Electronics Systems Ltd. is not an end-user to cover the service of the cellular networks. The customer is responsible for ensuring that there is cellular network reception using 4G technology.